


# HOME DECORATORS COLLECTION

BF-24684 PROVENCE WRITING DESK

INV#05051









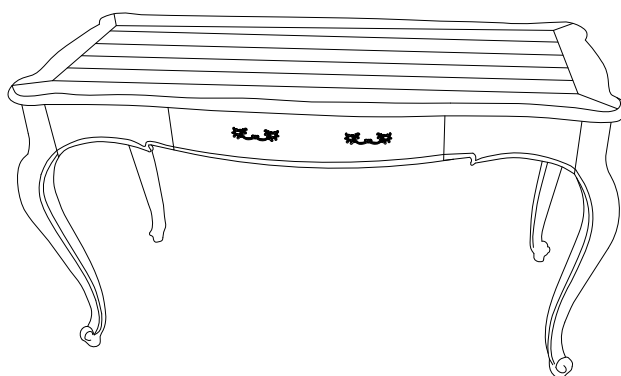



## ASSEMBLY INSTRUCTIONS


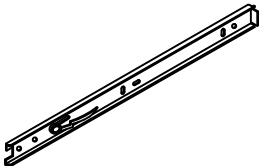
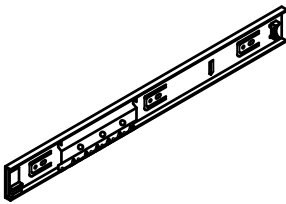


Made In China

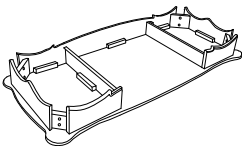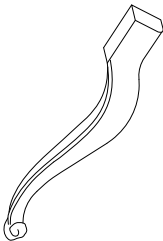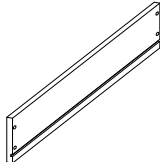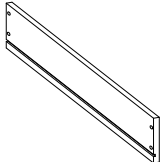

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.


**IMPORTANT NOTE:** Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST		
<b>A</b>  TOP PANEL-1PC	<b>B</b>  LEGS-4PCS	<b>C</b>  DRAWER PANEL FRONT-1PC
<b>D</b>  RIGHT DRAWER PANEL SIDE-1PC	<b>E</b>  LEFT DRAWER PANEL SIDE-1PC	<b>F</b>  DRAWER PANEL BACK-1PC
<b>G</b>  DRAWER PANEL BOTTOM-1PC	<b>H</b> 8mm× 5/8"  SCREWS-4PCS	<b>I</b>  ALLEN WRENCH-1PC
<b>J</b> 13mm× 1-3/4"  SCREWS-8PCS	<b>K</b>  HANDLES-2PCS	<b>L</b> 6mm× 1"  SCREWS-8PCS


<b>M</b> <div>6mm× 1/2"</div>  <div>SCREWS-12PCS</div>	<b>N</b>  <div>INNER SLIDES-2PCS</div>	<b>O</b>  <div>OUTER SLIDERS-2PCS</div>
<b>P</b>  <div>MAT SLICES-8PCS</div>	<b>Q</b>  <div>FEET-4PCS</div>	

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

## HOW TO SEPARATE GLIDES

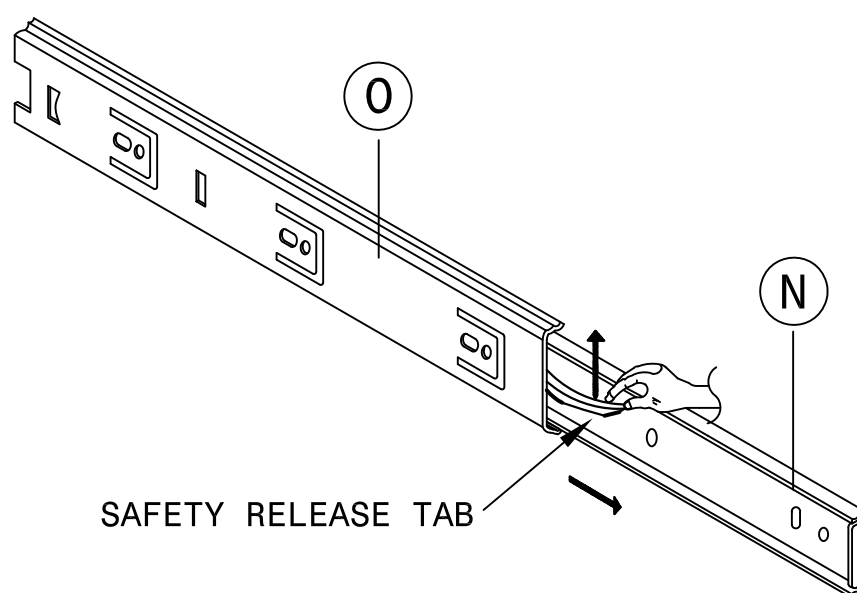


PRIOR TO ASSEMBLY, WE SUGGEST SEPARATING THE INNER GLIDES FROM THE OUTER-GLIDES, SIMPLY PULL THE LEFT/RIGHT INNER GLIDES FROM THE OUTER GLIDES EXPOSING A SMALL BLACK SAFETY RELEASE TAB, BY PUSHING THE SAFETY RELEASE TAB. YOU WILL BE ABLE TO SEPARATE THE GLIDE

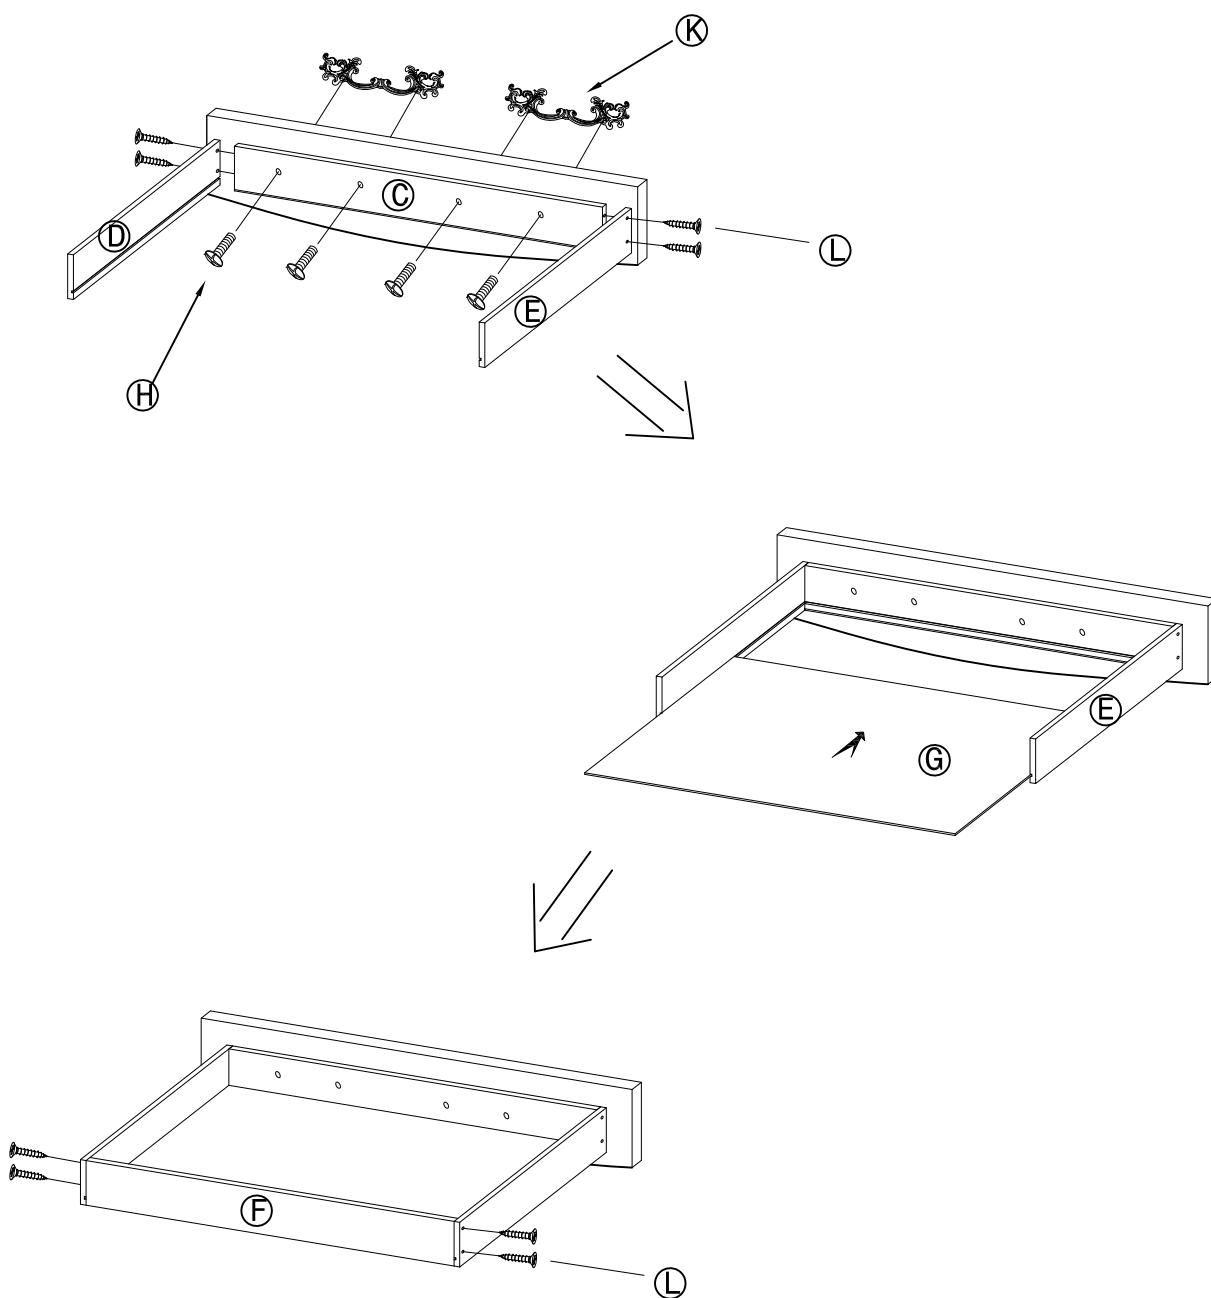

### 1) . ASSEMBLE THE DRAWER.

- ATTACH DRAWER PANEL SIDES(D/E) USING 4 SCREWS(L) .
- ATTACH THE 2 HANDLES(K) TO DRAWER PANEL FRONT(C) USING 4 SCREWS(H) .
- INSERT THE DRAWER PANEL BOTTOM(G) INTO SLOTS IN DRAWER PANEL SIDES(D/E) .
- ATTACH DRAWER PANEL BACK(F) BETWEEN DRAWER PANEL SIDES(D/E) USING 4 SCREWS(L) .


Arrow faces drawer front

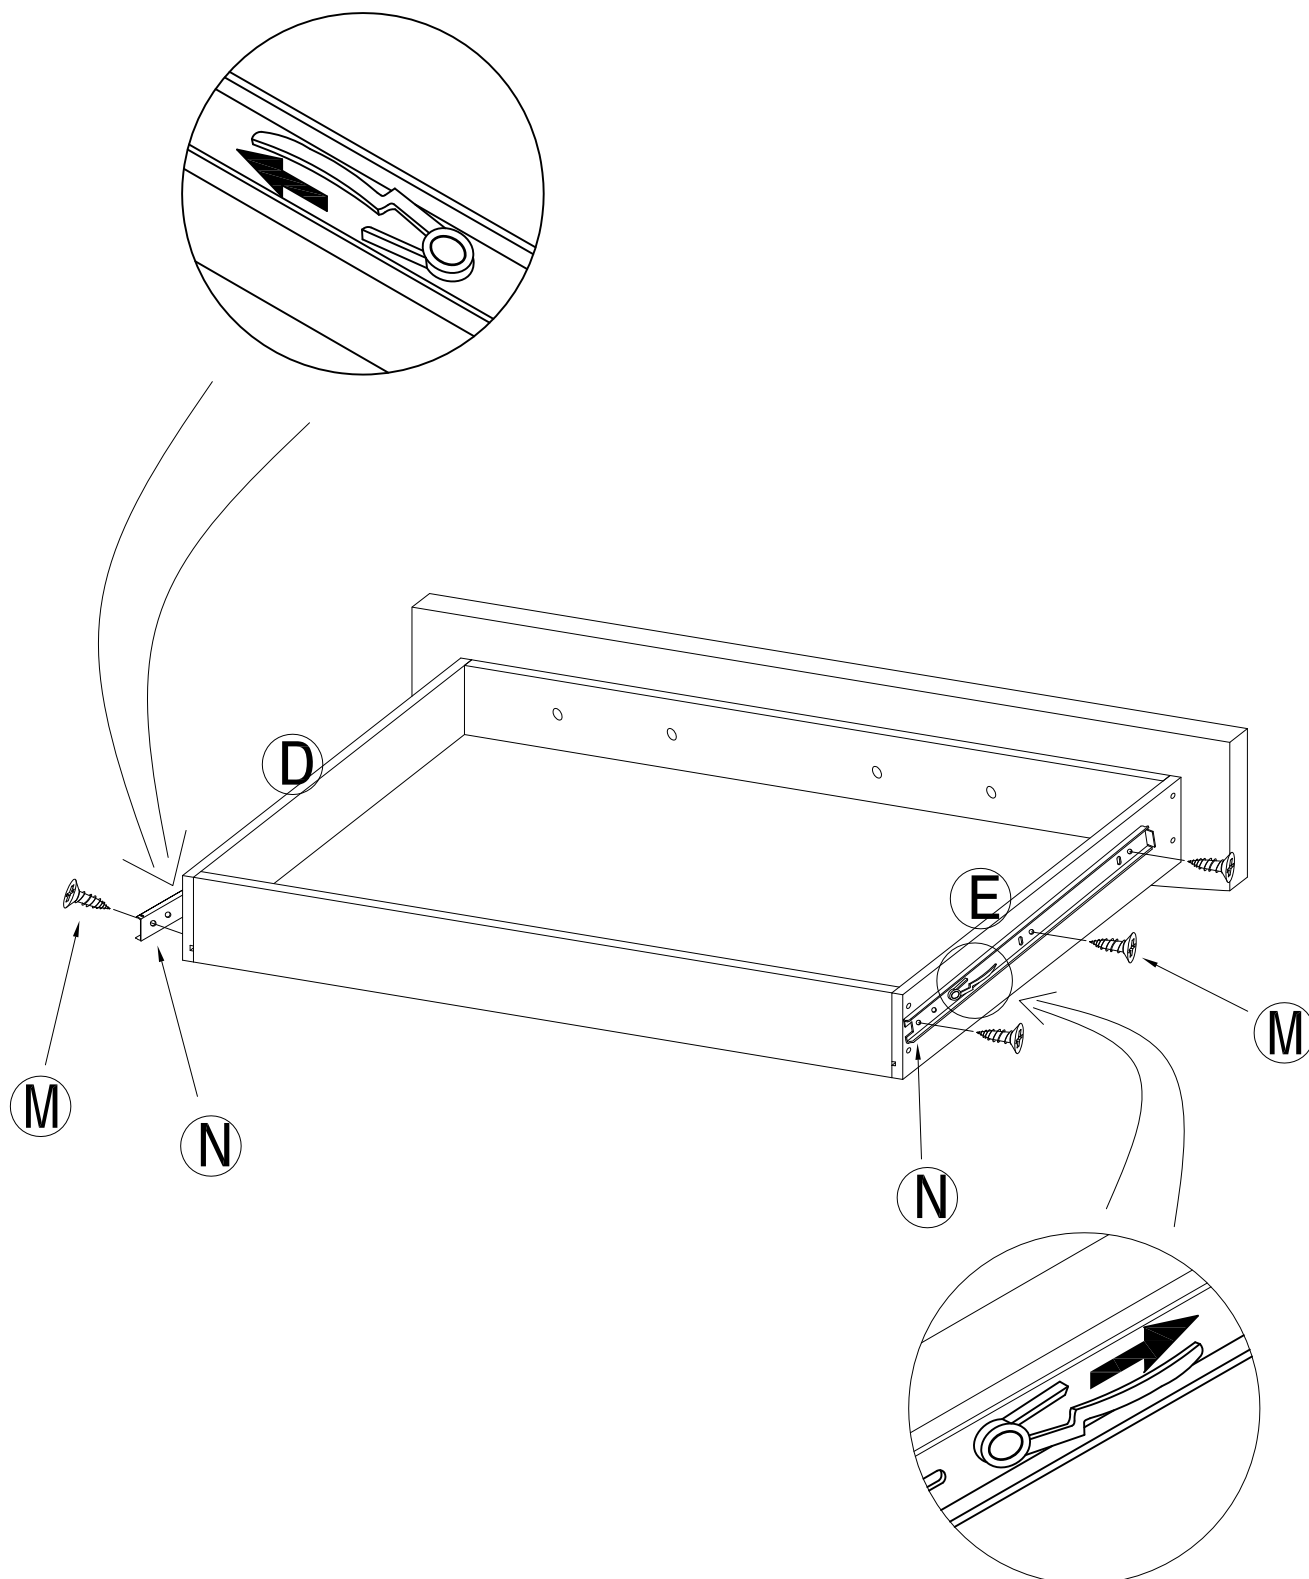

Arrow faces drawer front


**2) . ASSEMBLE THE INNER SLIDES(N) .**

- ATTACH THE 2 INNER SLIDES(N) TO DRAWER PANEL SIDES(D/E) USING 6 SCREWS(M) .

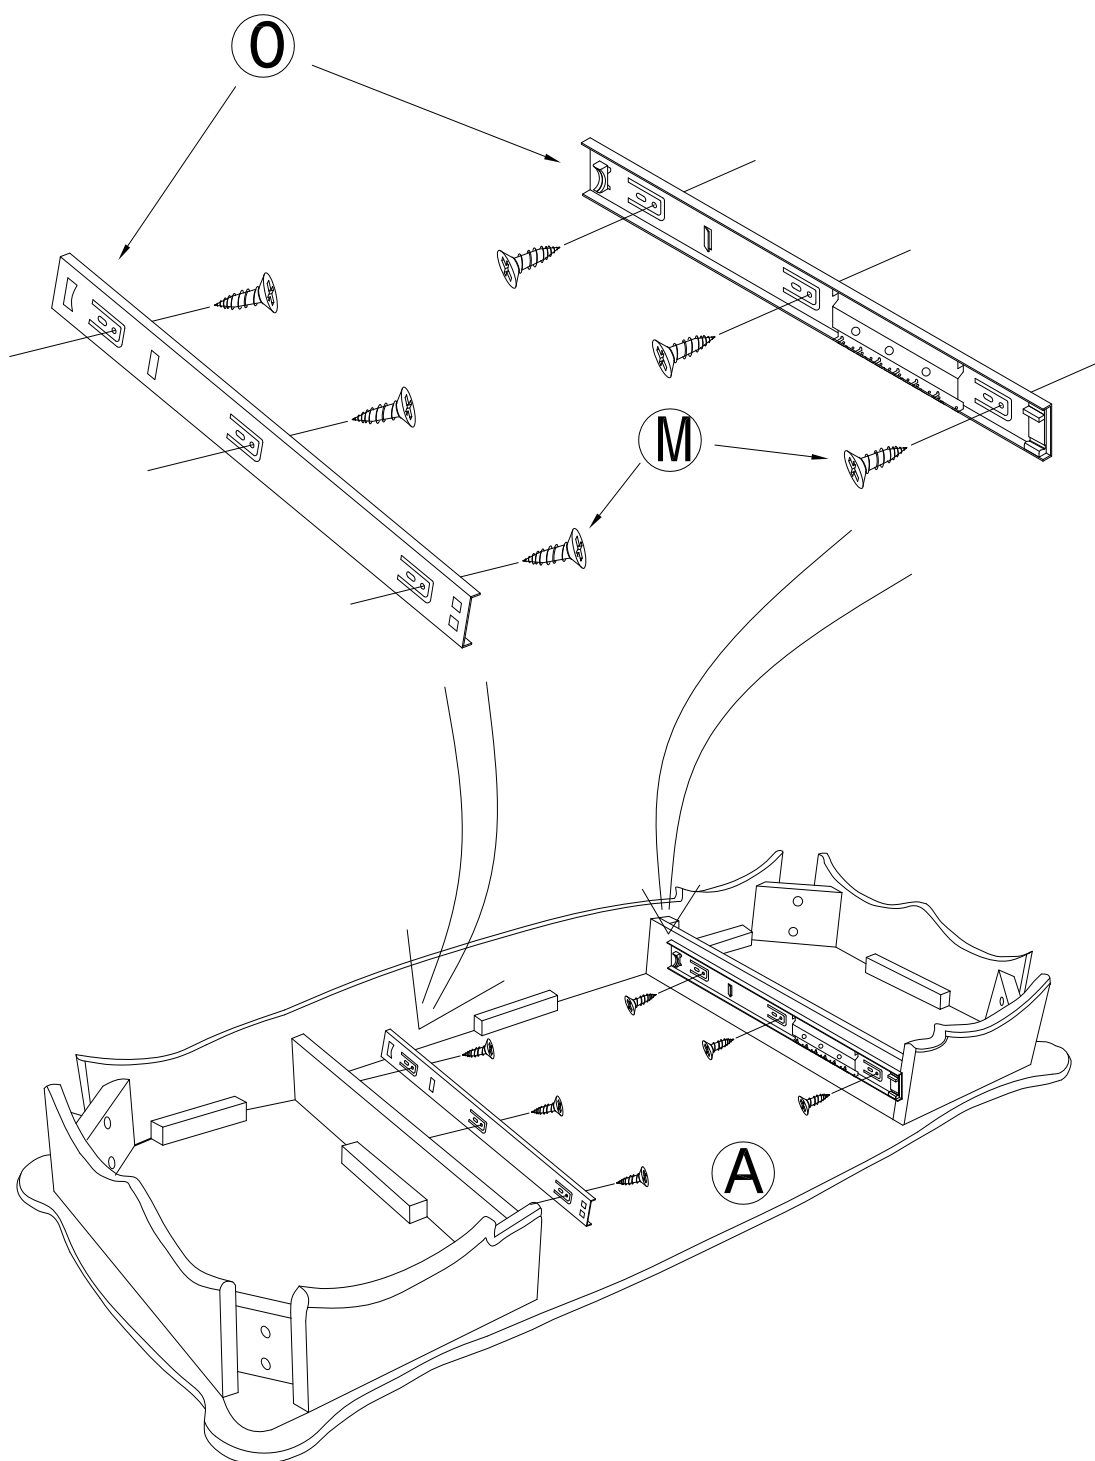


### 3) .ASSEMBLE THE OUTER SLIDERS(O) .

- ATTACH THE OUTER SLIDERS(O) TO TOP PANEL(A) USING 6 SCREWS(M) .

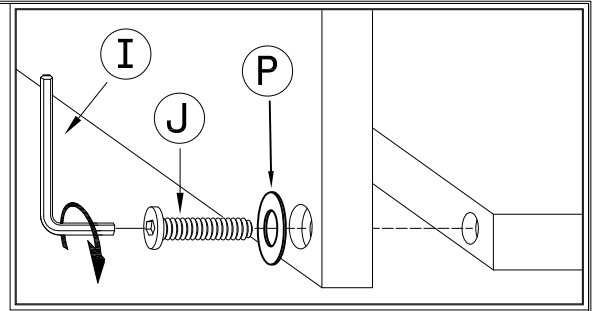


HOW TO USE THE ALLEN WRENCH

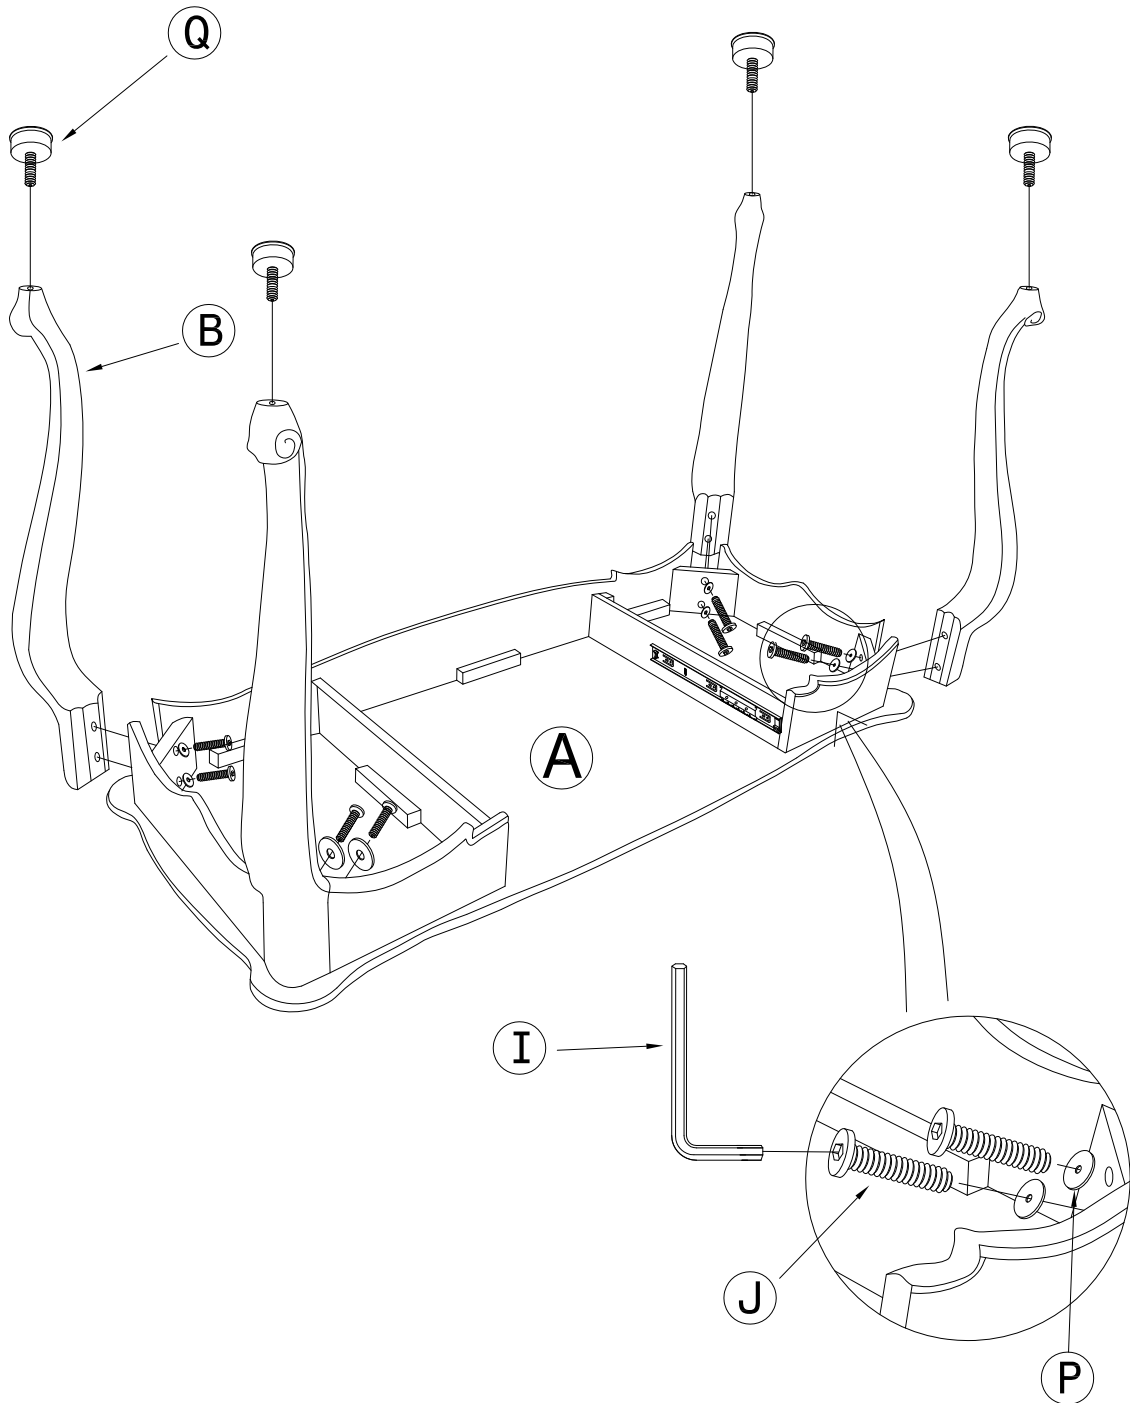

#### 4) .ASSEMBLE THE TOP PANEL(A) AND LEGS(B) .

- ATTACH 4 LEGS(B) TO TOP PANEL(A) USING 8 SCREWS(J) AND MAT SLICES(P) .
- ROTATE THE 4 FEET(Q) INTO THE HOLES IN THE LEGS(B) .



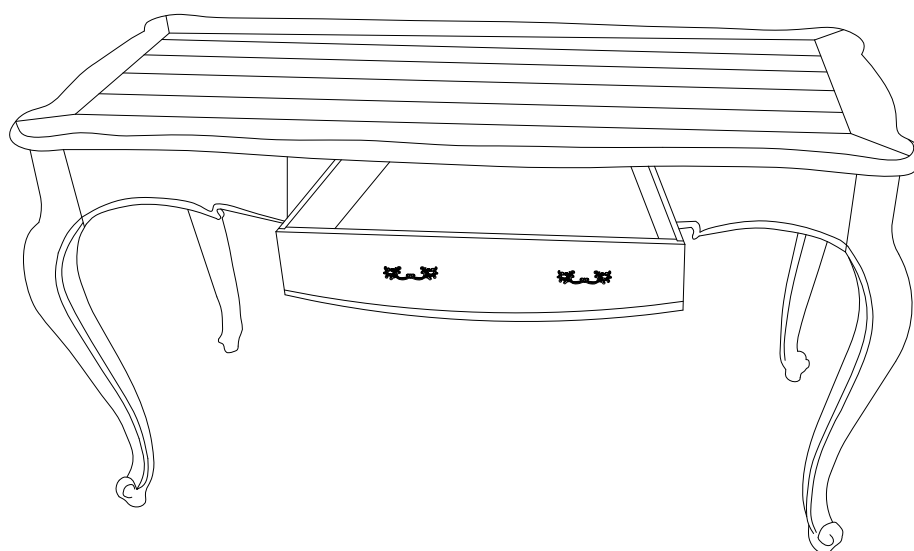

#### 5) .ASSEMBLE THE DRAWER.

- INSERT THE DRAWER INNER SLIDES(N) INTO THE OUTER SLIDES(0) .